

MOUNTING PROCEDURE

KIT SAVE CARTER
HONDA CB 650 F - CBR650 F

HCF6101


WWW.BARRACUDAMOTO.COM

KIT

RIGHT SIDE:
X2. THICKNESS 15
X2. SCREW 6X45
X1. SCREW 6X30
ONLY ON CB650F
X1. WASHER Ø 6

LEFT SIDE:
X2. THICKNESS 32
X1. SCREW 6X60
X1. SCREW 6X70
X1. SCREW 6X40

LEFT SIDE

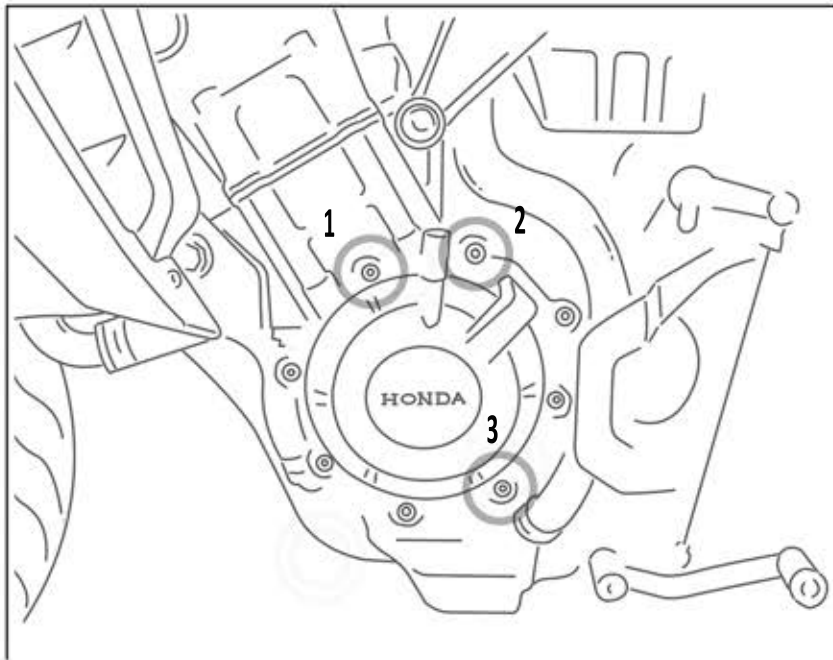

RIGHT SIDE

